



# SGX 5150 QUICK START GUIDE

*IoT Device Gateway*

## WHAT'S IN THE BOX



SGX 5150




2 External Antennas



USB Cable Type A to C

## Product Views

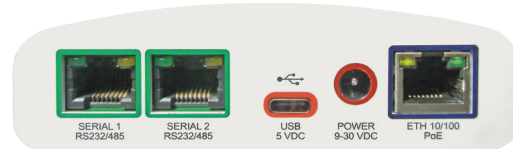

\*Model shown may not reflect actual product purchased.

Thank You for Choosing Lantronix®



# SGX 5150 QUICK START GUIDE

*IoT Device Gateway*

## Wireless QuickConnect

1. Attach the two antennas and insert the USB cable to power up the gateway.
2. From your Wi-Fi device connect to SSID SGX5150\_\*, where \* is the gateway 12-digit serial number.
3. From your browser, connect to 192.168.0.1 and use credentials **USER ID = admin** and **PASSWORD = PASS** to login.  
For security purposes, please change the admin password during initial setup.
4. Select **Wireless QuickConnect**, choose the appropriate network name for the gateway to connect with, and follow the prompts for your wireless network required security parameters.
5. Click **Apply** to save and complete the wireless network setup.

## Registration

To register your gateway scan the QR code, or please visit [www.lantronix.com/product-registration](http://www.lantronix.com/product-registration).



## Technical Support

For the latest documentation, software, tutorials and all technical support, please visit <http://www.lantronix.com/support>.